

LS-6941

Optical thermoset

DESCRIPTION

- Two-part, optically clear, solvent free, low viscosity silicone
- Cures at room temperature or rapidly with heat
- 10:1 Mix Ratio (Part A:B)

APPLICATION

- For bonding, casting or injection molding of high performance optical components
- For applications requiring index matching at 1.41
- For applications requiring an operating temperature range of -65 to 240°C (-85 to 465°F)


PROPERTIES

Typical Properties	Average Result	Metric Conv.	Standard	NT-TM
Uncured:				
Appearance	Transparent	-	ASTM D2090	002
Viscosity	5,800 cP Part A / 90 cP Part B	5,800 mPas Part A / 90 mPas Part B	ASTM D1084, D2196	001
Viscosity (Parts A and B mixed)	5,300 cP	5,300 mPas	ASTM D1084, D2196	001
Work Time	5 hours	-	-	008
Tack-Free Time	15 hours	-	C679	005
UV/Visible Spectrophotometry at 400 nm 1 cm path length	98 % Transmittance	-	E275	100
Cured: 15 min at 150°C (302°F)				
Specific Gravity	1.03	-	ASTM D792	003
Durometer, Type A	50	-	ASTM D2240	006
Tensile Strength	1,300 psi	9.0 MPa	ASTM D412	007
Elongation	95 %	-	ASTM D412	007
Tear Strength	20 ppi	3.5 kN/m	ASTM D624	009
Refractive Index, 589 nm	1.41	-	ASTM D1747, D1218	018


Typical Properties	Average Result	Metric Conv.	Standard	NT-TM
Dielectric Strength	500 volts/mil	19.7 kV/mm	ASTM D149	-
Volume Resistivity	1 x 10 ¹⁵	-	ASTM D257	040
Thermooptic Coefficient	-3.5 x 10 ⁻⁴ /°C	-	-	-
Refractive Index vs. Wavelength	See chart	-	-	-
Optical Absorption vs. Wavelength	See chart	-	-	-

The test data shown for this material is the average value for typical properties. All of these properties may not be tested on a lot to lot basis and cannot be used to draft specifications. Please [contact](#) NuSil® for assistance and recommendations in establishing limits for product specifications.

Refractive Index vs. Wavelength (25°C)
 Lightspan Optical Thermoset
 LS-6941

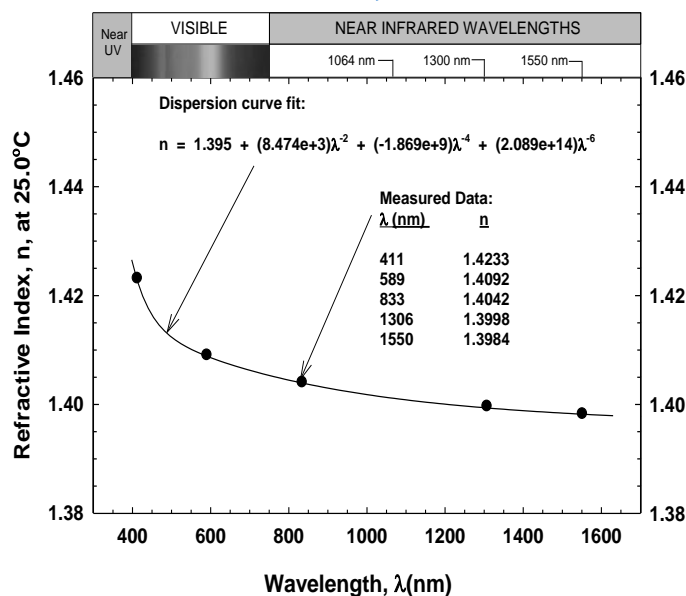

Optical Absorption vs. Wavelength (25°C)
Lightspan Optical Thermoset
LS-6941

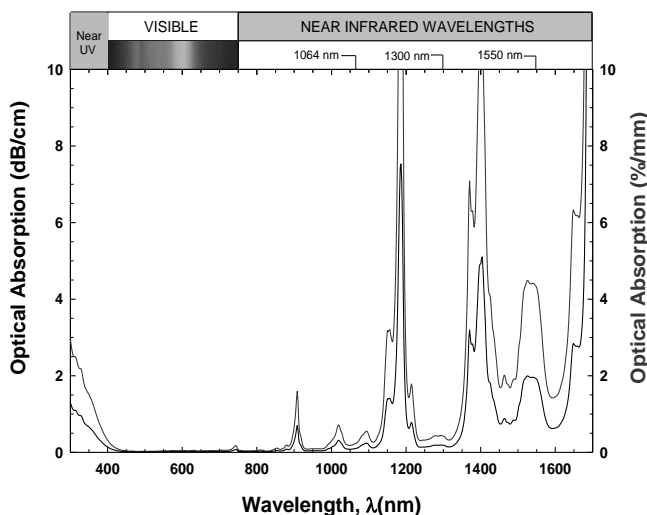

INSTRUCTIONS FOR USE

The product is supplied in a ready-to-use cartridge that allows off-line mixing in a preset 10:1 ratio, prior to casting or loading into an injection molder reservoir.

Vacuum Deaeration

The assembly should self-deaerate due to the product's long room temperature work time and low viscosity, as long as no pockets of air are trapped beneath mechanical parts. If accelerated deaeration is required, the assembly may be vacuum deaerated using a pressure of 635 mmHg (25 in. Hg) or greater. Apply the vacuum while observing the uncured fluid for presence of bubble formation and increase vacuum slowly enough to avoid rapid foaming. Hold vacuum until bubbles at the fluid surface collapse and are no longer visible.

Cure Inhibition

LS-6941 cures in contact with most properly cleaned substrate materials including optical glasses, optical plastics, and photonic semiconductors. Adhesion to fluoroplastic substrates is generally poor but may be improved with chemical etching or plasma etching of the substrate. Substrates to avoid include certain butyl, nitrite, chlorinated, and EPDM elastomers, certain plastics with leachable plasticizers, and the cure residues of certain adhesives including UV-cured epoxies and amine-cured epoxies.

Packaging

37 mL SxS Kit (0.0374 kg)
50 Gram Kit (0.051 kg)
1 Gallon Kit (4.04 kg)
5 Gallon Kit (20.2 kg)

Warranty

12 Months

Substrate Preparation

Substrates should be free of dust, oil, and fingerprint soils. Clean substrates using suitable industrial techniques for cleaning electro-optics. If using hydrocarbon solvent cleaning (e.g. acetone, toluene), a final rinse with reagent grade isopropanol is recommended. If using aqueous detergent cleaning, multiple final rinses with de-ionized water or a single rinse with reagent grade isopropanol is recommended. Obtain improved gel adhesion to some substrates using suitable primers such as NuSil's LS-3200-10 series Optical Primers. Adhesion to fluoroplastic substrates is generally poor but may be improved with chemical etching or plasma etching of the substrate.

Adjustable Cure Schedule

Product cures at a wide range of cure times and temperatures to accommodate different production needs. [Contact](#) NuSil for details. Some cure schedules* include:

65°C (149°F)

40 minutes

100°C (212°F)

2 minutes

* Cure time defined as the time required for a knife coat layer ~0.02" to be removed from a release liner

Clean-Up

Remove from surfaces by first wiping off excess gel with a suitable, dry, lint-free wipe and then by wiping down the surface with a lint-free wipe soaked with acetone. If the surface material is incompatible with acetone, use isopropanol. Complete the clean-up process with a final rinse with reagent grade isopropanol if removal of acetone residues is necessary. The user is responsible for compliance with all applicable regulations governing disposal of waste materials as indicated in the MSDS.

OPERATING TEMPERATURE

The operating temperature range of a silicone in any application is dependent on many variables, including but not limited to: temperature, time of exposure, type of atmosphere, exposure of the material's surface to the atmosphere, and mechanical stress. In addition, a material's physical properties will vary at both the high and low end of the operating temperature range. This type of silicone typically remains flexible at extremely low temperatures and has been known to perform at -50°C (-58°F) as well as resist breakdown at elevated temperatures up to 200°C (392°F). The user is responsible to verify optical and mechanical performance of a material in a specific application.

SPECIFICATIONS

Do not use the typical properties shown in this technical profile as a basis for preparing specifications. Please [contact](#) NuSil for assistance and recommendations in establishing limits for product specifications.

WARRANTY INFORMATION

The warranty period provided by NuSil Technology LLC is 12 months from the date of shipment when stored below 40°C in original unopened containers. Unless NuSil provides a specific

written warranty of fitness for a particular use, NuSil's sole warranty is that the product will meet NuSil's then current specification. NuSil specifically disclaims all other expressed or implied warranties, including, but not limited to, warranties of merchantability and fitness for use. The exclusive remedy and NuSil's sole liability for breach of warranty is limited to refund of purchase price or replacement of any product shown to be other than as warranted. NuSil expressly disclaims any liability for incidental or consequential damages.

WARNINGS ABOUT PRODUCT SAFETY

NuSil believes, to the best of its knowledge, that the information and data contained herein are accurate and reliable. The user is responsible to determine the material's suitability and safety of use. NuSil cannot know each application's specific requirements and hereby notifies the user that it has not tested or determined this material's suitability or safety for use in any application. The user is responsible to adequately test and determine the safety and suitability for their application and NuSil makes no warranty concerning fitness for any use or purpose. NuSil has completed no testing to establish safety of use in any medical application.

NuSil has tested this material only to determine if the product meets the applicable specifications. (Please [contact](#) NuSil for assistance and recommendations when establishing specifications.) When considering the use of NuSil products in a particular application, review the latest Material Safety Data Sheet and [contact](#) NuSil with any questions about product safety information.

Do not use any chemical in a food, drug, cosmetic, or medical application or process until having determined the safety and legality of the use. The user is responsible to meet the requirements of the U.S. Food and Drug Administration (FDA) and any other regulatory agencies. Before handling any other materials mentioned in the text, the user is advised to obtain available product safety information and take the necessary steps to ensure safety of use.

PATENT / INTELLECTUAL PROPERTY WARNING

NuSil disclaims any expressed or implied warranty against the infringement of any domestic or international patent/intellectual property right. NuSil does not warrant the use or sale of the products described herein will not infringe the claims of any domestic or international patent/intellectual property right covering the product itself, its use in combination with other products, or its use in the operation of any process.